

Helpful Hints DL FOLDING?


Setting up for DL FOLDING

The front cover (front panel) needs to be 100mm in width, each panel thereafter will need to be 1mm less than the one before.


For example an A4 6 page roll fold will be; cover 100mm wide, the next 99mm, and the end one 98mm.

This allows the brochure to fold into itself nicely without bunching and creates a professional look.

6 Page Roll Fold Brochure - Outside

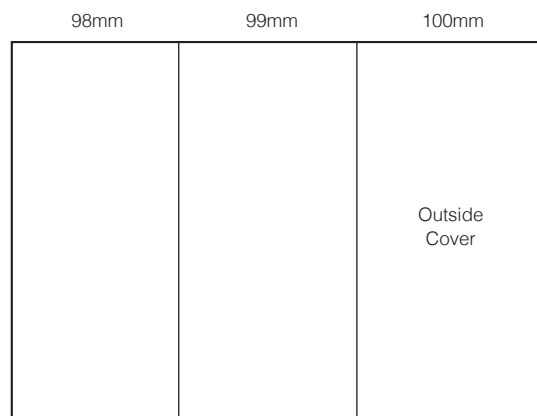

Inside

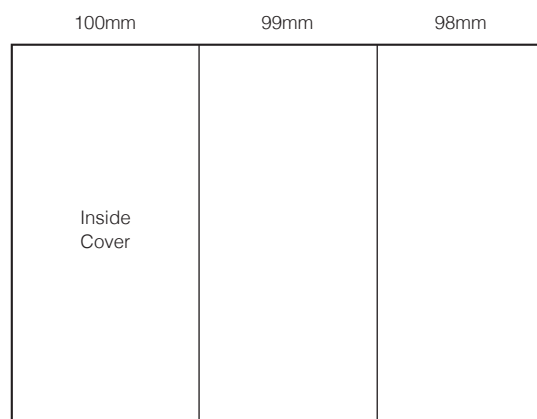

adelaideimage
PRINTING



If you require any further assistance or have any other printing enquiries please feel free to contact us:

Phone : (08) 8351 8181

Email: sales@adelaideimage.com.au